## INSTALLATION: NON FIRE-RATED FIRE EXTINGUISHER CABINET

# Distributed by www.AmeraProducts.com Phone: (800) 608-6548 rax: (409) 840-3543 info@ameraproducts.com

#### **SLIDING PLEXIGLASS FRONT MODELS**

- **1.** If equipped with lock, unlock cabinet and slide plexiglass front out from the top.
- **2. SURFACE MOUNT**: Place cabinet in position level to floor, and mark location of attachments on studding using 3/16" (5mm) holes as marking guides.

**RECESSED:** Frame in above, below and at both sides of the cabinet opening. **Note:** On load bearing walls, the studs must be doubled on either side of the cabinet tub. If a stud must be cut to install the cabinet, a load bearing header must be installed above the cabinet tub.

- **3.** Remove cabinet and drill 5/32" (4mm) holes through studs at marked points. Cabinet must be attached by at least 4 points, 2 of which must be in framing members. Install plastic wall anchors in no more than 2 places if needed. For masonry walls, install expansion shields in wall at marked points.
- **4.** Place cabinet in position and attach with Universal #10 x 2½" (64mm) self-drilling screws.
- **5.** Remove protective plastic from plexiglass and install decal if included.
- 6. Place fire extinguisher in cabinet
- 7. Insert plexiglass.
- **8**. If provided, attach chain to hammer and attach to cabinet as indicated. Lock cabinet if lock provided.

#### HINGED DOOR MODELS - SURFACE-MOUNT

- **1.** Remove all hardware and glazing, unlock cabinet if lock provided.
- 2. Place cabinet in position level to floor, and mark location of attachments on studding using 3/16" (5mm) holes as marking guides. Cabinet must be attached by at least 4 points, 2 of which must be in framing members.
- **3**. Remove cabinet and drill 5/32" (4mm) holes through studs at marked points. Install plastic wall anchors in no more than 2 places if needed. For masonry walls, install expansion shields in wall at marked points.
- **4.** Place cabinet in position and attach with Universal #10 x 2½" (64mm) self-drilling screws, or for masonry, appropriate screws for expansion shield.
- **5.** Remove protective plastic from plexiglass or glass and install decal if intended for glass. (Panorama Models Glazing is Pre-Installed)
- **6.** Align glazing on inside of door, holding in place while installing glass mounting clips on inside of door. Do not over-tighten.
- **7.** Install handle and roller catch or SAF-T-LOK™ in door.
- **8.** Place fire extinguisher in cabinet
- **9.** If provided, attach chain to hammer and attach to cabinet as indicated. Lock cabinet if lock provided.

#### HINGED DOOR MODELS - RECESSED

- **1.** Remove all hardware and glazing, unlock cabinet if lock provided.
- 2. Frame in above, below and at both sides of the cabinet opening. **Note:** On load bearing walls, the studs must be doubled on either side of the cabinet tub. If a stud must be cut to install the cabinet, a load bearing header must be installed above the cabinet tub.
- **3.** Place cabinet in position and mark location of attachments on studding using 3/16" (5mm) holes as marking guides. Cabinet must be attached by at least 4 points, 2 of which must be in framing members.
- **4.** Remove cabinet and drill 5/32" (4mm) holes through studs at marked points. Install plastic wall anchors in no more than 2 places if needed. For masonry walls, install expansion shields in wall at marked points.
- **5.** Place cabinet in position and attach with Universal #10 x  $2 \frac{1}{2}$ " (64mm) self-drilling screws.
- **6**. Check cabinet door assembly for freedom of movement. If it binds, shim as necessary.
- **7.** Remove protective plastic from plexiglass or glass and install decal if intended for glass. (Panorama Models Glazing is Pre-Installed)
- **8.** Align glazing on inside of door, holding in place while installing glass mounting clips on inside of door. Do not over-tighten.
- **9.** Install handle and roller catch or SAF-T-LOK™ in door.
- **10.** Place fire extinguisher in cabinet. If provided, attach chain to hammer and attach to cabinet as indicated. Lock cabinet if lock provided.



INSTALLATION—NON FIRE-RATED FIRE EXTINGUISHER CABINETS SEE SEPARATE INSTALLATION INSTRUCTIONS FOR FIRE-RATED CABINETS AND FOR TRIMLESS CABINET INSTALLATION


© 2019 Activar Construction Products Group

HEADQUARTERS & CUSTOMER SERVICE: 9702 NEWTON AV S, BLOOMINGTON, MN 55431

MANUFACTURING: COMMERCE, CA & BLOOMINGTON MN WAREHOUSES: DALLAS TX, FORT MYERS FL, LANCASTER PA, ATLANTA GA, SEATTLE WA, OMAHA NE, FARGO ND 6/28/19




## **EMBASSY FULLY RECESSED**

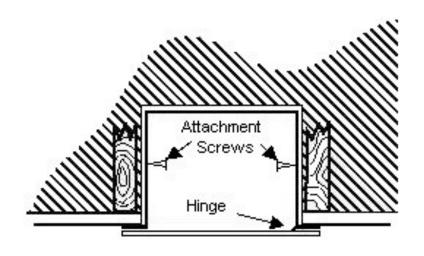


SEE SEPARATE INSTALLATION INSTRUCTIONS FOR FIRE-RATED CABINETS AND FOR TRIMLESS CABINET INSTALLATION

## HINGED DOOR MODELS - SURFACE-MOUNTED

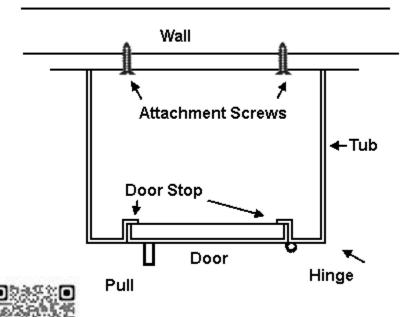

## HINGED DOOR MODELS - RECESSED

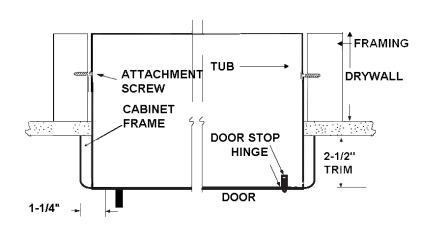

Distributed by
www.AmeraProducts.com
Phone: (800) 608-6568
Pax: (409) 840-3543
info@ameraproducts.com