

Power button (turns unit on)
 PROG button (adjust programming)
 ENTER button (accepts chosen option)
 ADJUST ▲▼ buttons (scrolls through options)
 RENT button (switches unit to rent mode)

PROGRAM OPTIONS

Press PROG button for program options. Important: Airoma refill must be in place.

1. Set Refill Size: 3000 or 9000 (Default 3000)



2. Set Time Now 24Hr Clock (Default 08:00) Hrs.



10 Min.




Single Min.




3. Set Start Time (Default 08:00) Hrs.



4. Set Stop Time (Default is 18:00 Hours Minimum 4 Hours from Start time Setting) Hrs.

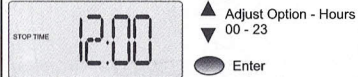

5. Spray Duration (Default 06 mins) 1 Min.

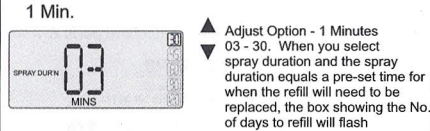


Note: You do not need to specify a pre-set time to proceed

AIROMA IPE (Intensity Plus Event)


IPE provides increased fragrance up to 3 times per day to coincide with known periods of heavy use.

6. Set IPE (Default 0)

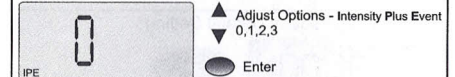


If 0 IPE is selected go to 7
 If 1, 2 or 3 selected go to 6a and repeat settings for each IPE


6a. Set Start Time (IPE 1,2,3 will appear for each IPE setting) Hrs.

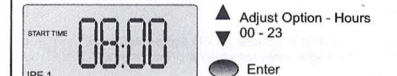

10 Min.

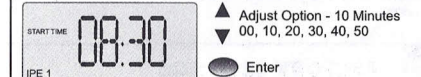

Single Min.

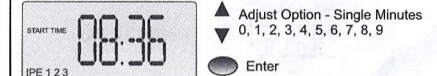

7. Refill Alarm: (Default On)



If you have programmed a **Spray Duration** that is **not** a pre-set time (30, 45, 60, 90 or 120 Day Icon - refer to section 5) this feature will not appear.

8. Battery Refill Symbol: (Default On)




When programming is complete LCD screen will scroll through all options selected. To review options, press and hold PROG button for 5 seconds.

RENTAL OPTIONS

Rental mode can be selected to override any previous program options. 30, 45 or 60 day options can be selected by pressing RENT button at any time. Pressing RENT button will scroll through options, when correct option is displayed this remains for 4 seconds and then reverts to Next Spray countdown.

 
 
Distributed by
 www.AmeraProducts.com
 Phone: (800) 608-6568
 Fax: (409) 840-5545
 info@ameraproducts.com

- ① Install the dispenser ensuring it is at a minimum height of 6 feet & 6 inches.
- ② Insert x2 "C" Cell alkaline batteries observing correct orientation.
- ③ Install an Airoma refill ensuring that it is inserted firmly in the unit. The Airoma IPE dispenser is designed to operate only when a refill is in place.
- ④ Press power button  Display will appear in LCD screen.

Power On: Factory Default Settings



If factory settings are satisfactory no further action is required.


- ⑤ For custom programming press PROG button and follow programming sequence using ADJUST   buttons to scroll through options and ENTER button to confirm options selected.
- ⑥a Or go to rental options.
- ⑥b When programming is complete LCD screen will scroll through all options selected. To review selected options press and hold PROG button for 5 seconds.
- ⑦ In normal operation LCD screen displays time to next spray.
- ⑧ Replacing an empty refill with a new Airoma refill automatically resets the system.

FACTORY SETTINGS

When batteries are replaced unit will revert to Factory settings.

REFILL SIZE 	Refill Size 3000
TIME NOW 	Time Now 08:00
START TIME 	Start Time 08:00
STOP TIME 	Stop Time 18:00 (10 Hours per day operation)
SPRAY DURN 06 MINS	Spray Duration Every 6 minutes, 30 Days until the refill will need to be replaced
IPE 0	IPE 0 (No IPE event selected)
REFILL ALARM 	Alarm ON
 07	Battery refill symbol ON


VECTAIR
AIROMA™

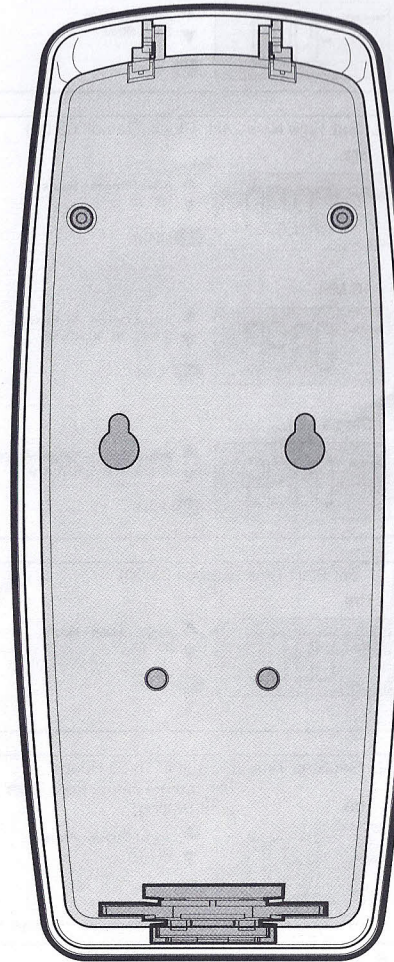

© Vectair Systems Inc. 2007

Guaranteed for 10 years against defects in parts & workmanship

VECTAIR
AIROMA™

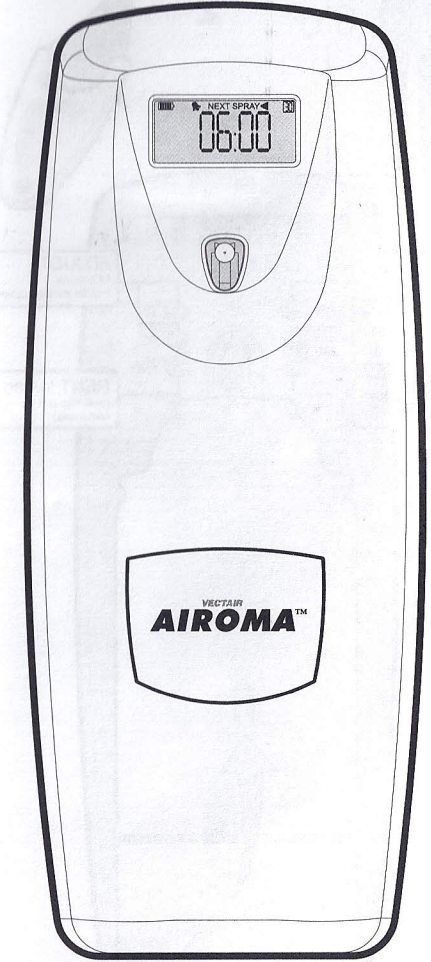

Automatic Aerosol Dispenser



Distributed by
www.Ameraproducts.com
Phone: (800) 608-6568
Fax: (409) 840-5545
info@ameraproducts.com