

Horizontal Wall-Mounted Baby Changing Station KB100 and KB110-SSWM INSTALLATION INSTRUCTIONS

Please Note:

To assure proper installation, it is suggested that a qualified person or carpenter install the Koala Baby Changing Station. Koala Kare Products will not be responsible if the station is not installed properly.

Koala Baby Changing
Stations have been tested
to hold a substantial static
load. The unit must be
attached to a permanent wall
that is capable of holding a
substantial load.

Tools Needed:

- Measuring Tape
- Level
- Flat Head and Phillips Screwdrivers
- Stud Finder
- Pencil
- Drill
- 7/32" (.56 cm) Drill Bit (regular and masonry)
- 1/8" (.32 cm) Drill Bit (regular and masonry)
- ½" (1.27 cm) Drill Bit (regular and masonry)

Hardware Supplied:

- Four ¼" x 3" (.64 cm x 7.62 cm) Panhead Wood Screws
- Four ¼" x 3" (.64 cm x 7.62 cm) Phillips Panhead Machine Screws
- Four ³/₄" x ¹/₄" (2 cm x .64 cm) Hole Washers
- Four Toggles
- One Restroom Sign

You are responsible for the safe operation of this unit.

Inspection Criteria:

A properly maintained unit:

- Opens and closes smoothly.
- Has both ends of a functioning, non-frayed strap: buckle clicks when closed and strap is attached at both ends of the unit.
- Offers parents liners through a fully stocked liner dispenser. (Dispenser is built into unit.)
- Provides a clean, convenient place for customers to attend to their children.


- Horizontal Strap (885)
- Horizontal KB100 Gas Shock (874)
- Horizontal KB110 Gas Shock (875)
- Cream Horizontal Liner Dispenser Lid (829)
- Grey Horizontal Liner Dispenser Lid (828)
- Koala Restroom Door Decal (841)
- Warning Label (975)
- Cream Unit End Caps (692)
- Grey Unit End Caps (850)
- Box of Liners (KB150-99)

Your unit can be installed to meet ADA regulations when and where applicable. Refer to Federal Register, Volume 56, No. 144 28 CFR Part 36.

Distributed by
www.AmeraProducts.com
Phone: (800) 608-6568
Fax: (409) 840-5545
info@ameraproducts.com



Horizontal Wall-Mounted Baby Changing Station KB100 and KB110-SSWM INSTALLATION INSTRUCTIONS

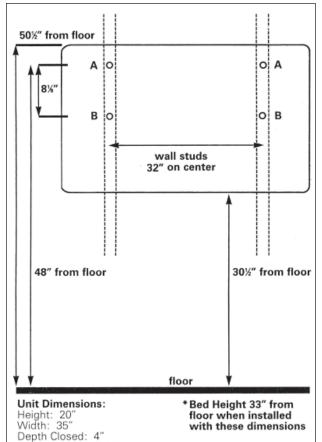



Depth Opened: 19%"






A. Insert Toggle in hole.



B. Pull ring and push cap tightly against wall.



C. Snap off straps.

D. Install unit using screws and washers.

Using Restraint System

To fasten the waist restraint strap, place strap around child's midsection, and push spring tabs into buckles until both spring tabs lock in place with an audible "click". Straps can be adjusted to make strap tighter or looser as required.

Step 1.

Remove changing station from the shipping container and check for any freight damage. Identify the best location for installing the unit. Hold the unit in place and open the bed. Make sure you have taken the operating clearance into consideration.

Step 2.

Determine the best method of mounting based on the type of wall. You may have left over hardware when you have nished installation.

Step 3.

The horizontal unit has four mounting holes provided in the back wall, positioned on a 32" (81 cm) stud center.

If possible, locate the wood or metal wall studs for fastening the unit in the desired location. If the walls do not have studs on center as outlined, make sure at least one side of the unit is installed into the stud. Use toggles (supplied) for holes on the opposite side.

Step 4.

Find the stud where you will be attaching the left side of the unit to the wall. Measure up from the oor, at the center of the stud, and mark the wall. Line up Hole A with the mark on the wall. Mark remaining holes using a measuring tape to make sure the holes are precisely positioned. Hold unit in place to verify. Use four ½" x 3" (.64 cm x 7.62 cm) panhead wood screws with washers (supplied) when wall studs are available.

If the wall surface is masonry or tile over studs, use a 7/32" (.55 cm) masonry drill bit for the pilot hole until you hit the stud. Change bit to 1/8" (.32 cm) regular drill bit. Use four $\frac{1}{4}$ " x 3" (.64 cm x 7.62 cm) panhead wood screws with washers (supplied).

If the wall has wood studs that are not on 32" (81 cm) centers, has metal studs or an underlying surface of concrete block, drill with a $\frac{1}{2}$ " (1.27 cm) masonry bit. You must allow a minimum of 2 $\frac{1}{2}$ " (6.35 cm) of inside wall space for toggles to turn. Insert and tighten toggles (supplied). Position unit over toggles and insert $\frac{1}{4}$ " x 3" (.64 cm x 7.62 cm) Phillips panhead machine screws with washers (supplied).

Step 5.

Position Koala sign (supplied) on the outside of the restroom door. Fill the built-in dispenser with sanitary bed liners. Replacement parts and additional liners can be purchased from your local distributor.



Distributed by
www.AmeraProducts.com
Phone: (800) 608-6568
Fax: (409) 840-5545
info@ameraproducts.com