

Countertop Recess Mounted Baby Changing Station KB112-RE INSTALLATION INSTRUCTIONS

Please Note:

To assure proper installation, it is suggested that a qualified person or carpenter install the Koala Baby Changing Station. Koala Kare Products will not be responsible if the station is not installed properly.

Tools Needed:

- Measuring Tape
- Level
- Phillips Screwdrivers
- Drill
- Pencil
- 5/32" (.396 cm) Drill Bit (regular and masonry)
- Sealant (silicone)
- Saw

Tools Supplied:

- Eight 10" x 11/4" (25.4 cm x 3.175 cm) screws
- Eight screw cover bases
- Eight screw covers
- One instruction sheet

You are responsible for the safe operation and use of this unit. Not intended to hold more than 50lbs.

Inspection Criteria:

A properly maintained unit:

- Is free of any cracks or damage that can cause injury.
- Has both ends of a functioning, non-frayed strap: buckle clicks when closed and strap is attached at both ends of the unit.
- Provides a clean, convenient place for customers to attend to their children.
- Has a liner dispenser located along the front edge of unit.

- Replacement strap
- Warning label
- Koala door label
- Mounting hardware
- Sanitary Bed Liners

Distributed by
www.AmeraProducts.com
Phone: (800) 608-6568
Fax: (409) 840-5545
info@ameraproducts.com

Countertop Baby Changing Stations are intended for use on an existing countertop surface that is capable of holding significant weight. Unit should be permanently mounted to the countertop surface per the installation instructions. When an infant is placed onto changing surface, use strap and buckle to secure infant to changing surface. Never leave Child Unattended.



Countertop Recess Mounted Baby Changing Station KB112-RE INSTALLATION INSTRUCTIONS

Step 1.

Remove changing station from the shipping box and check for any freight damage.

Step 2.

Remove the rough opening template from the shipping carton. Separate the oval template from the cardboard sheet. Use template to trace rough opening with a pencil. Drill hole in interior of rough opening to allow saw access. Cut out rough opening.

Step 3.

Construct under counter support as shown in illustration. Support should be 3" below bottom of mounting surface.

Step 4.

Place the unit onto counter surface in desire position. Using the unit's mounting holes as a guide, mark the screw hole locations with a pencil. Remove unit and drill holes with a 5/32" (.396 cm) diameter drill bit. Drill down ¾" deep. Place the unit onto counter surface using the drilled holes as a guide. Screw fasteners through holes into countertop surface. Apply a suitable water sealant (not provided) such as silicone around the base of the unit.

Step 5.

Fill the built-in dispenser with sanitary bed liners. Replacement parts and additional liners can be purchased from your local distributor.

Note: If drilling into marble or granite, take care not to crack or chip the surface area while drilling. Larger drill bit may be necessary.


Distributed by

www.AmeraProducts.com

Phone: (800) 608-6568

Fax: (409) 840-5545

info@ameraproducts.com

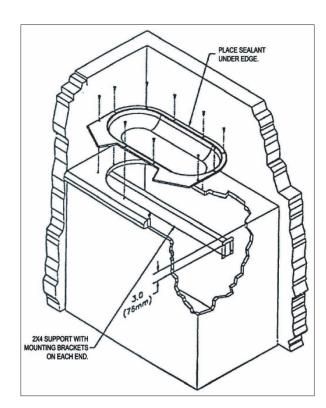

Using Restraint System

To fasten the waist restraint strap, place strap around child's midsection, and push spring tabs into buckles until both spring tabs lock in place with an audible "click". Straps can be adjusted to make strap tighter or looser as required.

