Distributed by
www.AmeraProducts.com
Phone: (800) 608-6568
Fax: (409) 840-5545
info@ameraproducts.com

The DoorWave installation guide

Functional Form

Where form always follows function

0

bolts on the DoorWave side of door, and T-nut on opposite

side of door.

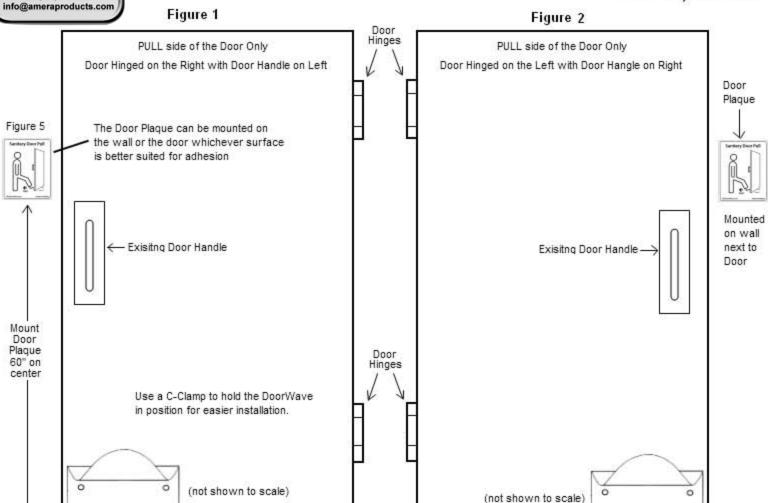


Figure 3
(mounting close-up for door hinge on right)

1/2" From the edge of the door

Use a C-Clamp to hold the DoorWave in position when installing the self tapping screws. Easier to install one or two then remove the Clamp to do the other two

0

Mounting location is on the same side as the door

handle on the inward opening PULL side of door

Figure 4 Self drilling and tapping screws that are included in your kit can be used with all solid wood The 4 self tapping doors and metal doors. Only phillips head screws hollow wood doors need pass that are supplied can thru bolt and T-nut be used for solid wood and metal doors Solid door or Metal door the screws Figure 4 a drill and install in one step Hollow Doors 1/4" T-nut pilot hole drilled all Figure 4 b the way thru door only used for very thin door hollow Mounted 1/2" From bottom Hollow door example using 4 of the door

Mounting location is on the same side as the door

handle on the inward opening PULL side of door